



Accessory Arm

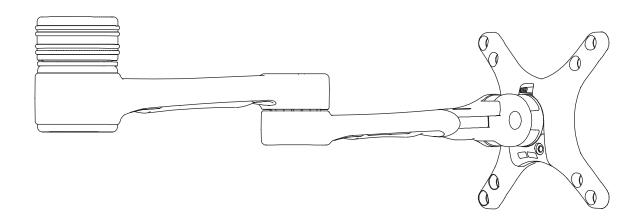


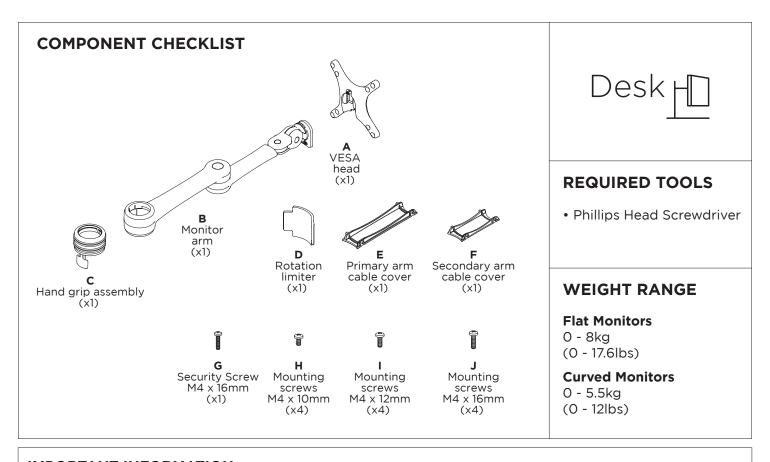


IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with the range of AF Poles and arms.
- This product is compatible with the range of Air Poles and arms.
 The manufacturer accepts no responsibility for incorrect installation.
- ! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.


1. Install VESA monitor head

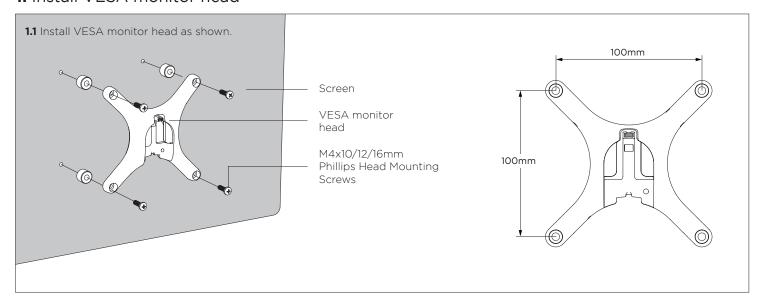

2. Install arm assembly

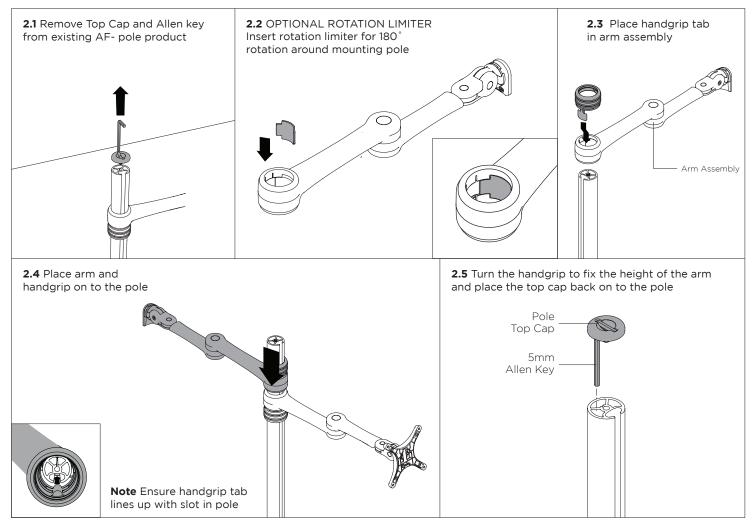


3. Mounting Monitor

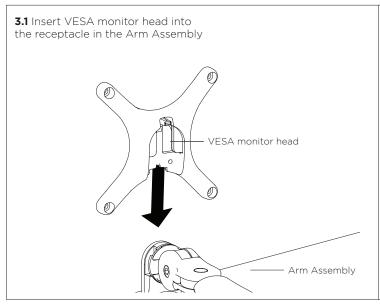


3.2 OPTIONAL SECURITY SCREW Ensure the Monitor is supported, then loosen the Monitor head screw with the 5mm Allen Key and tilt screen up before installing the M4 x 16mm Security Screw into the Security Screw hole Note: Support Screen when adjusting tilt. Monitor head screw Security Screw Loosen Hole Tighten Phillips Head Screwdriver 5mm Allen Key M4 x 16mm

4. Adjusting Height

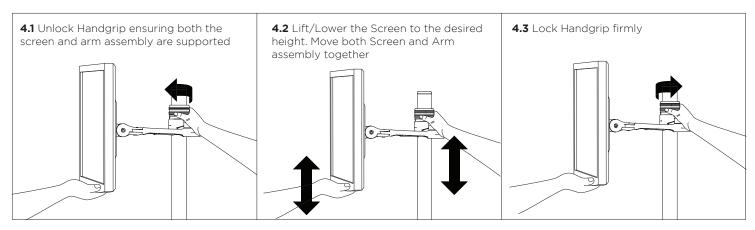


Security Screw

5. Cable Management

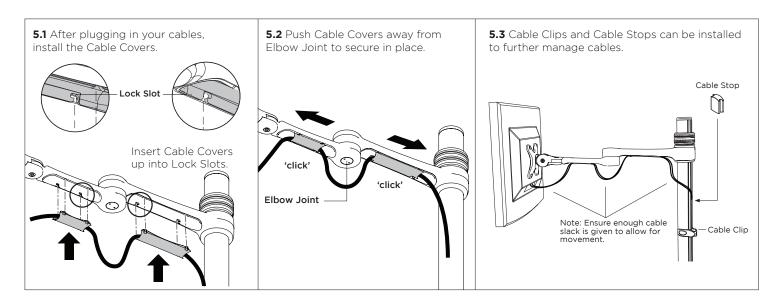

5. Cable Management (Cont)

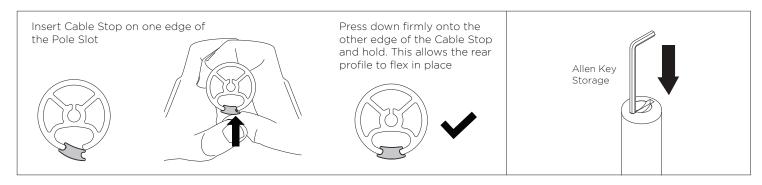

Adjusting the Display Bracket

